

### Contents

- ① 1x Electronic Paper Display\*  
(To be mounted in iSEE holder)




\*Batteries are included

### Display Function

#### Open the display:


Slide control unit cover to the side to access start button.

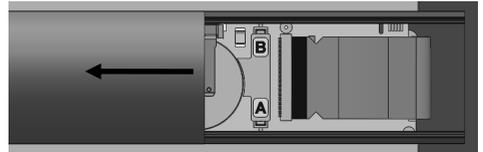

#### Start the display:

Press and hold the A button  $\geq 2.5$  seconds.

*(Look at the screen and make sure the text is animating)*

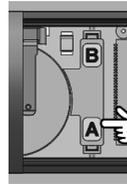

#### To stop the display:

Press and hold the A button  $\geq 2.5$  seconds.

Slide cover back into position.

NOTE: To extend the life length of the display, see instructions for 'Night Sleep Activation' on the next page. →

### Display Mounting



**SCAN QR-CODE**

**FOR DIGITAL INSTRUCTIONS AND  
HOW TO MOUNT THE DISPLAY**

<https://motiondisplay.com/suntory-196-isee/>

#### LEGAL DISCLAIMER:

MOTION DISPLAY SCANDINAVIA AB AND ALL ITS AFFILIATES DISCLAIM ANY AND ALL RESPONSIBILITY FOR USE OF MOTION DISPLAY PRODUCTS FOR OTHER PURPOSES THAN ITS INTENDED USE AS DESCRIBED IN THIS USER INSTRUCTION. INSTALLATION AND REMOVAL MAY ONLY BE PERFORMED BY AUTHORIZED PERSONNEL, AND SHALL BE MADE ONLY IN ACCORDANCE WITH THIS INSTRUCTION. MOTION DISPLAY DISCLAIMS ALL RESPONSIBILITY FOR ANY INJURIES CAUSED BY WRONGFUL HANDLING OF THE PRODUCT, INCLUDING FROM ANY MATERIAL LEFT ON SHELVES AFTER REMOVAL.

### Night Sleep Activation

The battery life length can be extended by activating the Night Sleep mode, and the display will sleep for 8 hours per day. During Night Sleep, the animation stops and the display shows a predetermined message and a small moon symbol.

**IMPORTANT!** In order to assure the display is animating between 8 a.m. and 8 p.m., the Night Sleep mode has to be activated in the morning between 8-12 by following the steps below:

1. Make sure the display is activated.
2. Press and hold A + B buttons for > 2 seconds and release when the display becomes black and shows a small moon symbol.
3. Done – Night Sleep is now activated. The first 5 seconds the display will become black and a small white moon symbol is shown as an indication that the Night Sleep mode has been activated.



Time when Night Sleep is activated



4 h Active	12 h Active	8 h Sleeping
------------	-------------	--------------

Example: If the Night Sleep mode is activated at 9 am, the display will go to sleep 12 hours later and then sleep for 8 hours, i.e. sleeping time has been set from 9 p.m. to 5 a.m.

To deactivate the Night Sleep mode – repeat step 1 and 2.

**Note:** The display becomes white, indicating that the Night Sleep mode has been deactivated.

To change the Night Sleep activation time, make sure that the Night Sleep mode is deactivated and repeat the three steps above.

To confirm that the Night Sleep mode has been correctly activated, press B button quickly:

- 1) The display becomes black with a small white moon symbol if the Night Sleep mode has been activated.
- 2) The display becomes white if the display is animating 24/7.


### Changing Batteries

When it is time to replace the batteries, a battery symbol is shown and the display stops animating, showing a pre-determined message, the so called End of Life view.



Slide control unit cover off completely to reveal the battery module.  
Remove and replace batteries, "+" sign facing up. Slide cover back into position.

*Do not mix old batteries with new ones. Only use CR2450 batteries!*

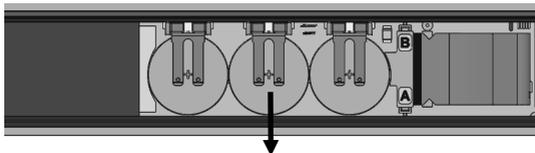

#### LEGAL DISCLAIMER:

MOTION DISPLAY SCANDINAVIA AB AND ALL ITS AFFILIATES DISCLAIM ANY AND ALL RESPONSIBILITY FOR USE OF MOTION DISPLAY PRODUCTS FOR OTHER PURPOSES THAN ITS INTENDED USE AS DESCRIBED IN THIS USER INSTRUCTION. INSTALLATION AND REMOVAL MAY ONLY BE PERFORMED BY AUTHORIZED PERSONNEL, AND SHALL BE MADE ONLY IN ACCORDANCE WITH THIS INSTRUCTION. MOTION DISPLAY DISCLAIMS ALL RESPONSIBILITY FOR ANY INJURIES CAUSED BY WRONGFUL HANDLING OF THE PRODUCT, INCLUDING FROM ANY MATERIAL LEFT ON SHELVES AFTER REMOVAL.